



- NOTES:
1. RESISTOR VALUES ARE IN OHMS (K=1,000, M=1,000,000).
  2. CAPACITOR VALUES ARE IN  $\mu$ F.
  3.  $\rightarrow$  THIS SYMBOL INDICATES A CONNECTION BETWEEN CIRCUIT BOARDS.
  4.  $\rightarrow$  THIS SYMBOL INDICATES A SOCKET CONNECTOR ON THE FRONT PANEL.

5.   LETTERS OR SYMBOLS IN A BOX INDICATE LOCATIONS ON THE CIRCUIT BOARDS.
6. THIS SYMBOL INDICATES A SCREWDRIWER ADJUSTMENT.
7.  $\rightarrow$  THIS SYMBOL INDICATES CLOCKWISE ROTATION OF CONTROLS OR ADJUSTMENTS AS VIEWED FROM THE KNOB END OF THE SHAFT.
8. REFER TO THE CIRCUIT BOARD X-RAY VIEWS FOR THE PHYSICAL LOCATION OF PARTS.

**SCHEMATIC OF THE  
HEATHKIT®  
VOLT-OHM-MILLIAMMETER  
MODEL IM-105**